

Surtronic® Duo



Portable surface roughness testers

Surtronic[®] Duo

What it does

The Surtronic Duo is superior portable surface roughness tester that measure multiple roughness parameters with a 1-button click. Roughness measurement parameters such as Ra, Rz, Rp, Rv and Rt are displayed on a brightly lit intuitive 2.4" LCD colour display. Its rechargeable battery operation makes it a convenient way of performing fast, easy and precise on-the-spot measurements in almost any environment and surface.

How it does it

The hard-wearing diamond stylus is drawn across the part with a precision motorised traverse mechanism to ensure that the correct horizontal distance is travelled. Vertical movement of the stylus is detected by a high quality piezo-electric pick-up as it travels across peaks and valleys which converts mechanical movement into electrical signals. The electrical signal is digitised and sent to a microprocessor for instant calculation of surface parameters using standardised algorithms.



USB Mini charging

The mini USB port can be used for charging with the included mains charger (or with any standard USB charger).



Bluetooth technology

Quick, reliable communication between traverse and display/control unit.

Measure

Tactile measurement button great for challenging orientations

Separates

The Duo splits into a display/control unit and traverse unit via a slide and lock mechanism.

Diamond stylus and piezoelectric pick-up

The hard wearing, robust piezo-electric pick-up stylus with diamond tip assures very reliable measurement.

Li-Poly battery

Most advanced rechargeable battery technology for unrivalled reliability and battery life.





Profile graph

Clear detailed graph showing measurement area – excellent for visually identifying defects.

Simple 3-button navigation

Instant access to menu options and settings.

USB mini charging port

Charge from mains or any standard USB charging port.

Rubberised moulding

Enhanced durability and improved grip provides unbeatable protection in harsh shop floor environments.

Keeping it simple

The Surtronic philosophy keeps the process simple. It is the perfect tool for any inspector to check surface roughness even in the most demanding applications.

- Incoming inspections
- Final inspection before shipment
- Process control on the production line
- Checking large components or structures

Standards and traceability

The reference standard supplied can be used both to calibrate the instrument and check for stylus wear to ensure the most accurate results are always being achieved.


Measurement	Best capability
Roughness standards (Ra)	$\pm(2\% + 0.004 \mu\text{m})$
Workpiece or component surface texture (Ra)	$\pm 3\%$ of measured value per trace

UKAS calibration and testing

Taylor Hobson provides full certification for artefacts and instruments in our purpose built ISO graded clean room UKAS facility. Our UKAS laboratory is able to measure all of the parameters associated with surface texture, including French, German, USA and Japanese derivatives.



0026

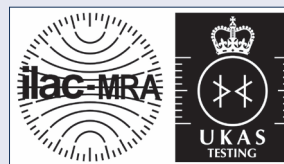

2624

Tough, fast and reliable handheld roughness testers...

Durable roughness testers for shop floor, industrial & inspection room applications



Fast and reliable

Simply press the measurement button and in a few seconds a full set of traceable measurement results including a detailed profile graph is displayed.

Built to last, by design...

Impact resistant rubberised mouldings surround a recessed, Mylar protected high durability screen making the unit robust enough for even the most demanding industrial environments.

InstantOn

By utilising InstantOn technology these instruments are ready to measure in less than 5 seconds from switching on!

In situ measurements

Monitor wear and roughness changes in situ during product's life. E.g. monitoring changes in turbine blade roughness as an early warning sign for defects and efficiency losses.

User-friendly, not user-hostile!

The Surtronic Duo are as simple and easy-to-use as any SmartPhone. Users have the advantage of the intuitive quick access 3-button menu and its crisp 2.4" daylight readable industrial colour LCD screen

Bluetooth connectivity




This next generation bluetooth technology boasts super efficient connectivity allowing wireless communication between the display unit and traverse unit.

Built for power...

Powered by heavy duty reliable Li-Poly technology, the Surtronic Duo operates 24/7 with over 2000 measurements from a single charge.

Parameters available: ISO 4287 Roughness*
Rt – total profile height
Rp – maximum profile peak height
Rv – maximum profile valley depth
Rz – maximum height of the profile
Ra – arithmetic mean deviation
Other parameters include: Rsk, Rku, Rq, Rz1 max * Includes primary parameters

Applications

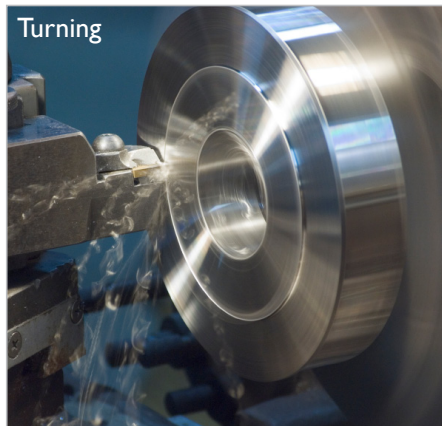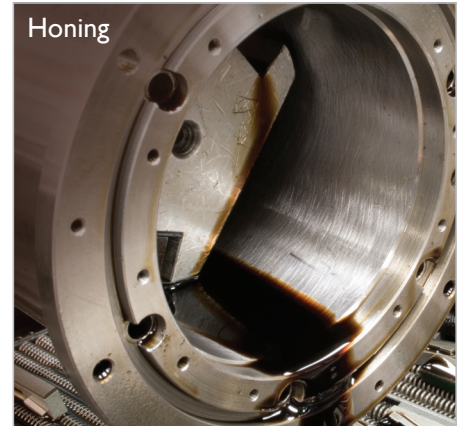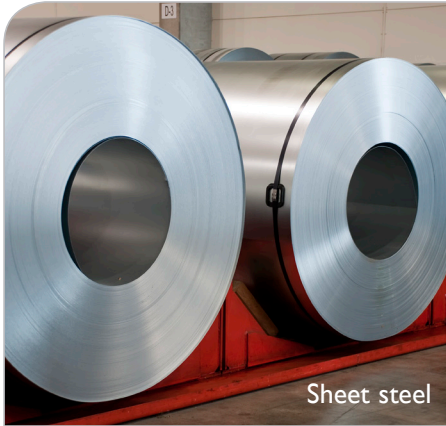

and many more...

Process control – Grinding, turning, milling, honing, polishing, extrusion

Heavy industry – Shipbuilding, pipelines, sheet steel

Aerospace – Turbine blades, turbine shafts, wing composites

Other – Print rollers, flooring, bonding, glass

Technical specification


Instrument performance		Surtronic® Duo
Gauge	Resolution	0.01 μm (0.4 μin)
Measurement	Range (Ra)	Up to 40 μm (1600 μin)
	Range (Rz, Rv, Rp, Rt)	Up to 199 μm (7800 μin)
	Repeatability	2 % of value + noise
	Accuracy	5 % of reading + 0.1 μm (4 μin)
	Noise	0.1 μm (4 μin)
Calibration	Process	Automatic software calibration
	Standard	Able to calibrate to ISO 4287 Roughness Standards
Parameters	Standards	ISO 4287
	ISO 4287 (Roughness)	Ra, Rz, Rp, Rv, Rt, Rz1max, Rsk, Rq, Rku
	ISO 4287 (Primary)	Pa, Pz, Pp, Pv, Pt

Technical		Surtronic® Duo
Data output	On-screen	Up to 5 results per page, selectable on-screen graph
Battery	Charger	Mini USB 5V 1A 110-240VAC 50 / 60 Hz
	Charging time	4 hours
Power	Battery life	> 10,000 measurements per charge
	Standby time	5,000 Hours
	InstantOn	Max 5 sec from standby to ready to measure
	Auto-sleep function	5 minutes

Instrument capability		Surtronic® Duo
Pick-up assembly	Pick-up type	Piezoelectric
	Stylus type	Diamond, Radius 5 μm (200 μin)
Gauge	Gauge force	200 mg
	Measurement type	Skidded
Filter	Filter type	Gaussian
	Filter cut-off	0.8 mm
Traverse	Traverse length	5 mm (0.2 in)
	Traverse Speed	2 mm/sec (0.08 in/sec)
Display	Units	μm / μin

Environmental / physical		Surtronic® Duo
Physical specifications	Weight including pickup	0.4 Kg (14 oz)
	Power source	Li-Poly rechargeable battery
Operating conditions	Temperature	5 - 40 °C (41 - 104 °F)
	Humidity	0 - 80 % non-condensing
Storage conditions	Temperature	0 - 50 °C (32 - 122 °F)
	Humidity	0 - 80 % non-condensing

Surtronic® Duo dimensions

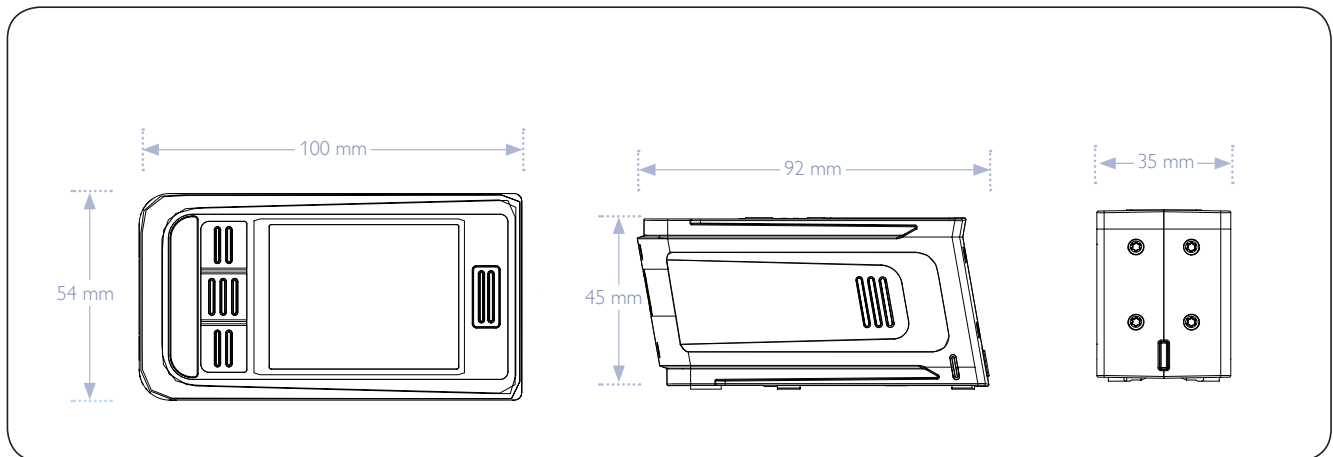

What is a skid?

Surtronic Duo is a skidded device. The skid guides the pick-up along the workpiece, with the workpiece itself forming the datum for measurement. This method usually eases set-up by reducing the need for leveling. It also reduces the effects of vibration due to a much smaller measuring loop.

The skid is an integral part of the gauge and has a radius large enough to prevent movement in and out the roughness characteristics of the surface. The stylus and the skid are independent in their height (Z) movement but move together in the measurement direction. Surface deviations are recorded as the difference between the stylus and the skid movement in the Z direction.


The skid will act as a mechanical filter, taking out much of the general form of the component. Also, wavelengths greater than the diameter of the skid will not register.

How much difference does the stylus tip size make?


These instruments use a 5 μm (200 μin) stylus tip radius. This suits their purpose as a portable tool for checking roughness in three ways:

- **Durability** – It is less likely to be damaged even when subjected to mishandling.
- **Maintenance** – It is easier to remove dirt and oil that collects on the tip during use.
- **Suitability** – It acts as a filter to remove the highest surface frequencies that are more reliably measured in a controlled environment.

Other Taylor Hobson instruments use a stylus with a tip radius of 2 μm (80 μin). This smaller radius coupled with an inductive gauge head having low contact force enables analysis of even the smallest surface imperfections.

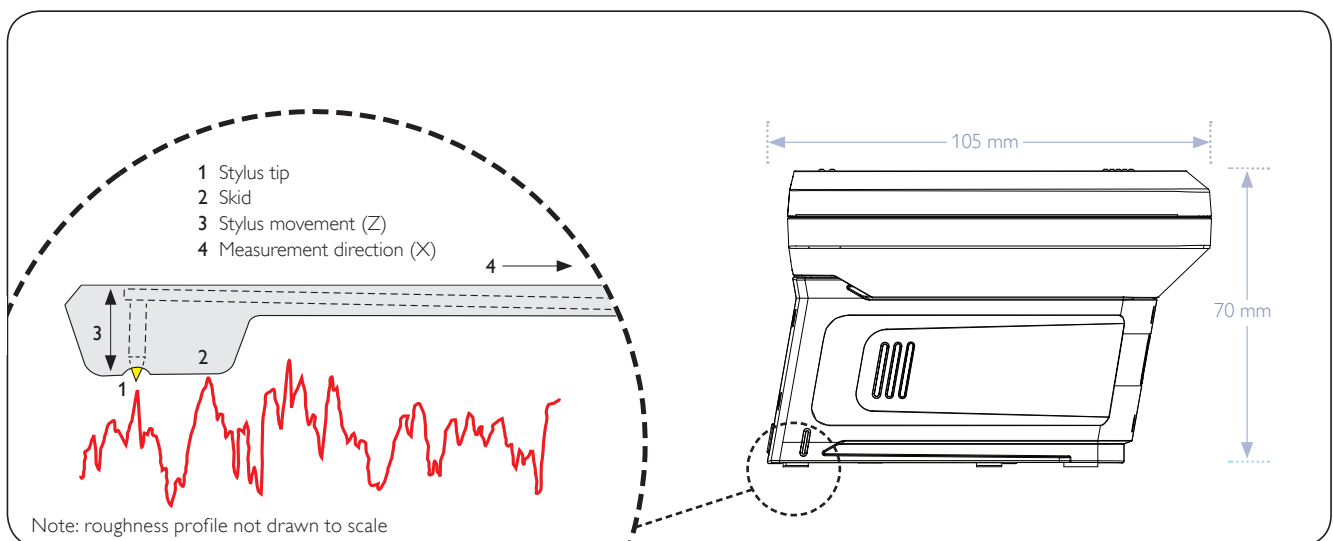

Amplitude parameters

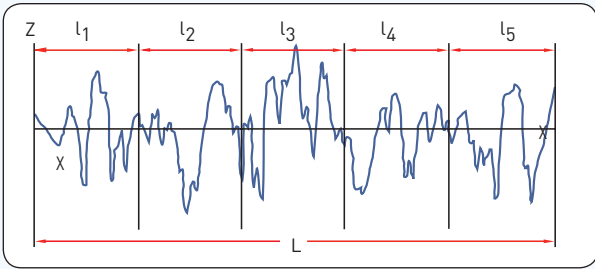

Ra, Rq, Pa, Pq

$l_1 - l_5$ are consecutive and equal sampling lengths (1 the sampling length corresponds to filter cut-off length λ_c).

The evaluation length 'L' is defined as the length of profile used for assessing surface roughness parameters (usually containing several sampling lengths; five consecutive sampling lengths are taken as standard).

Ra is the universally recognised, and most used, international parameter of roughness. It is the arithmetic mean of the absolute departures of the roughness profile from the mean line.


$$Ra = \frac{1}{L} \int_0^L |z(x)| dx$$

Rq is the rms root-mean-square (rms) value of the departures of the profile from the mean line.

$$Rq = \sqrt{\frac{1}{L} \int_0^L z^2(x) dx}$$


Pa and **Pq** are the corresponding parameters from the primary profile.

Note: Rq is sometimes referred to as RMS.

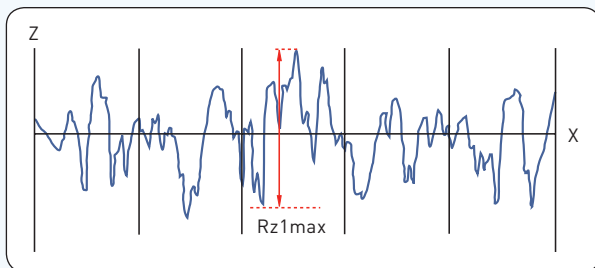

Rz1max

Rz1max is the largest peak to valley in any sampling length within the evaluation length.

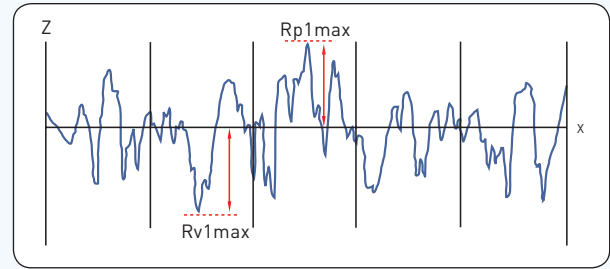


Rv, Rp, Rt, Pv, Pp, Pt,

***Rv** is the maximum depth of the profile below the mean line within the sampling length.

***Rp** is the maximum height of the profile above the mean line within the sampling length.

Rt is the maximum peak to valley height of the profile in the evaluation length.

Pv, Pp and **Pt** are the corresponding parameters from the waviness and primary profiles, respectively.

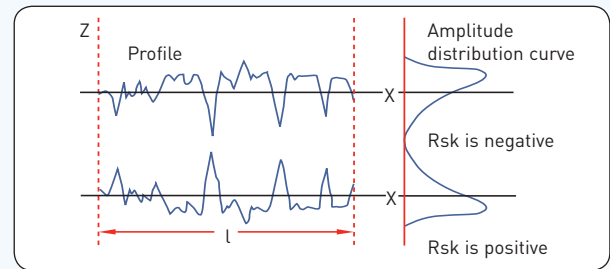

Rsk, Rku

Rsk – Skewness – is the measure of the symmetry of the profile about the mean line. It will distinguish between asymmetrical profiles of the same **Ra** or **Rq**.

$$Rsk = \frac{1}{Rq^3} \left[\frac{1}{L} \int_0^L z^3(x) dx \right]$$

Rku – Kurtosis – is a measure of the sharpness of the surface profile.

$$Rku = \frac{1}{Rq^4} \left[\frac{1}{L} \int_0^L z^4(x) dx \right]$$

Rsk and **Rku** are calculated within the sampling length.

* Most parameters are defined over one sample length, however in practice more than one sample length is assessed (usually five) and the mean calculated. This provides a better statistical estimate of the parameter's measured value.

Surface finish fundamentals

The surface of every component has some form of texture which varies according to its structure and the way it has been manufactured. These surfaces can be broken down into three main categories: Roughness, Waviness and Form. In order to control the manufacturing process or predict a component's behaviour during use, it is necessary to quantify surface characteristics by using surface texture parameters.

Surface texture parameters can be separated into three basic types:

Amplitude parameters – Measurement of the vertical characteristics of the surface deviations

Spacing parameters – Measurement of the horizontal characteristics of the surface deviations

Hybrid parameters – Combinations of spacing and amplitude parameters

Sample length – The profile is divided into sample lengths l , which are long enough to include a statistically reliable amount of data. For roughness and waviness analysis, the sample length is equal to the selected cut-off.

Cut-off (l_c) – A cut-off is a filter that uses either electronic or mathematical means to remove or reduce unwanted data in order to look at wavelengths in the region of interest. The sample length is also known as the cut-off length.

Evaluation length – The length in the direction of the X axis used for assessing the profile under evaluation. The evaluation length may contain one or more sample lengths. For the primary profiles the evaluation length is equal to the sample length.

Standards – Where appropriate Taylor Hobson equipment follows procedures as determined in ISO 3274-1996, ISO 4287-1997, ISO 4288-1996, ISO 11 562 and other international standards.

All parameters using either Roughness, Waviness or Primary Profiles conform to the following assumptions:

T = Type of profile, either R (Roughness) or W (Waviness) or P (Primary)

n = Parameter suffix, e.g. q, t, p, v, etc.

N = Number of measured sampling lengths

When a parameter is displayed as T_n (e.g. R_p), then it is assumed that the value has been measured over 5 sampling lengths. If the number of measured sampling lengths is other than 5 sampling lengths, then the parameter shall display this number thus T_nN , e.g. R_{p2} .

Max rule – If a parameter also displays max (e.g. R_{z1max}) then the measured value shall not be greater than the specified tolerance value. If max is not displayed (e.g. R_p) then 16% of the measured values are allowed to be greater than the specified tolerance value.

See ISO 4288-1996 for more details of the Max and 16% rules.

Recommended cut-off ISO 4288-1996				
Periodic profiles	Non-periodic profiles		Cut-offs	Sampling length/ evaluation length
Spacing distance S_m (mm)	R_z (μm)	R_a (μm)	l_c (mm)	l_c/L (mm)
>0.013 to 0.04	(0.025) to 0.1	(0.006) to 0.02	0.08	0.08/0.4
>0.04 to 0.13	>0.1 to 0.5	>0.02 to 0.1	0.25	0.25/1.25
>0.13 to 0.4	>0.5 to 10	>0.1 to 2	0.8	0.8/4
>0.4 to 1.3	>10 to 50	>2 to 10	2.5	2.5/12.5
>1.3 to 4	>50 to 200	>10 to 80	8	8/40

Accessories and spares

1 Portable hybrid solar rechargeable power bank*

Portable power bank for charging the Surtronic Duo on the go. Can be charged by USB, mains AC or sunlight.

Code SC-15



2 Compact portable carry bag

Helps secure the Surtronic Duo and prevent accidental drops especially for applications involving measuring at heights.

Code SA-51



3 USB charger

Mini USB charger
5V 1A 110-240VAC
50/60 Hz with international adapters

Code SC-10



4 Hard transport case*

Air and water tight case that provides the Surtronic Duo with extra protection for safe storage and/or transportation.

Code SA-55




5 Calibration standard

For calibrating and checking the Surtronic Duo instrument.

Code CS-20

Ra 5.81 μm (229 μin)

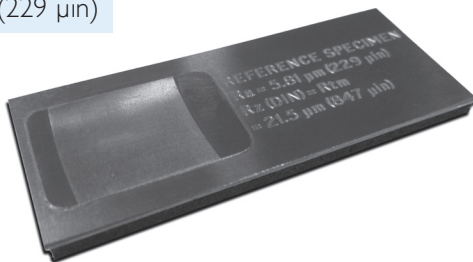

6 Magnetic base*

Lightweight compact base specially designed to allow for measurements in multiple orientations including upside down on metallic surfaces.

Code SA-41



* Not supplied as standard with Surtronic Duo


All accessories listed above are available for order. Please contact your local Taylor Hobson representative for additional or special requirements.

Surtronic® product range

Surtronic® S100-series offers high speed roughness with a large display and simple menu structure. Battery powered and offering total portability with a built-in memory for up to 100 readings.

- Unique stylus lift for total flexibility
- Long traverse length & extended pick-up reach
- Powerful PC software included


Features	
Gauge range / resolution	400 µm (0.012 in) / 0.01 µm (0.4 µin)
Accuracy (5 µm diamond tip)	1% of reading + LSD µm

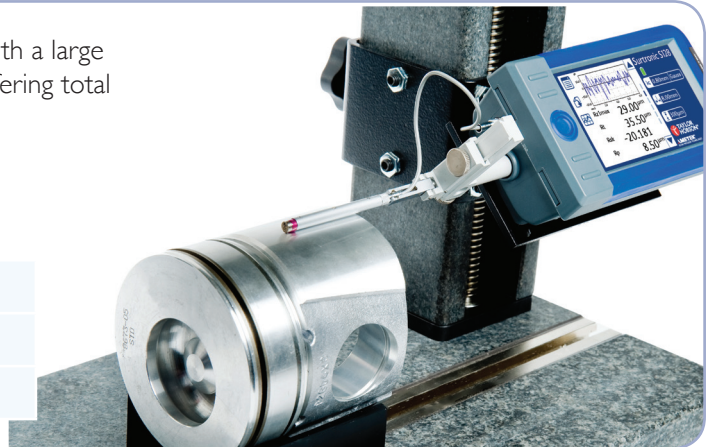

IntraTouch measures roughness, waviness and contour. A low cost, portable system for high level surface texture analysis on the shop floor.

- 50mm (1.97in) traverse with straightness datum
- Automatic calibration over a sphere ensures that radius and form measurements are correct


Features	
Gauge range / resolution	16 nm @ 1mm range (0.63 µin @ 0.04 in) / 3 nm @ 0.2 mm range (0.12 µin @ 0.008 in)
Straightness accuracy	0.2 µm over any 20 mm (8 µin over any 0.78 in)

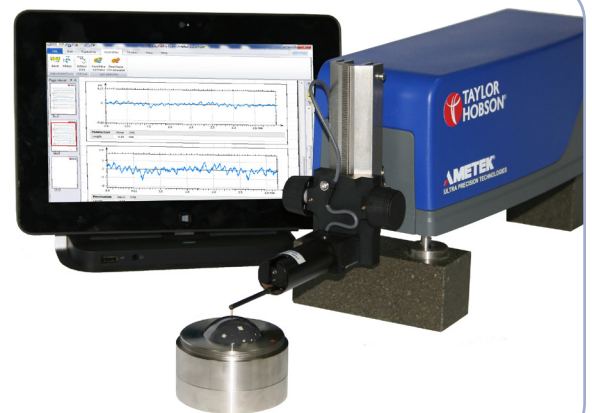

The Surtronic® R-50/R-80 is robust enough for the shop floor but accurate for any inspection area, giving a flexible solution for all roundness and form measurements.

- Patented gauge orientation
- Robust enough for 24/7 operation
- Easy-to-use touchscreen software


Features	
Gauge resolution	30 nm (1.18 µin)
Spindle accuracy	±25 nm (0.98 µin)

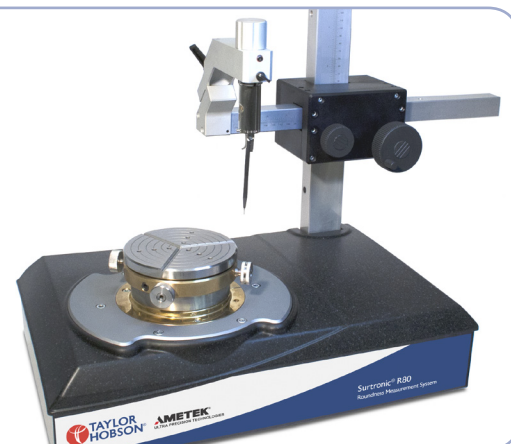

Surtronic® R-100 Series builds on the robustness and ease-of-use of the R-50/R-80, offering a higher throughput and improved feature set that includes advanced harmonic analyses and a higher gauge resolution.

- Robust, fast and easy-to-use
- Includes Rapid Centre™*
- Throughput 3 parts/minute including set-up

Features	
Gauge resolution	6 nm (0.24 µin)
Spindle accuracy	±25 nm (0.98 µin)

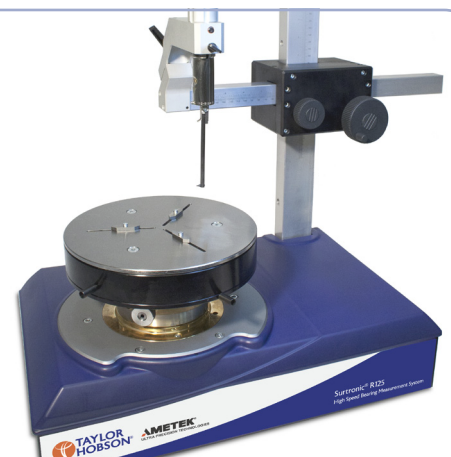

*Centering attachment is supplied as standard with R-120/R-125 models, or available to purchase as an accessory on other models.

The Metrology Experts

Established in 1886, Taylor Hobson is the world leader in surface and form metrology and developed the first roundness and surface finish measuring instruments.

www.taylor-hobson.com

Sales department

Email: taylor-hobson.sales@ametek.com

Tel: +44 (0) 116 276 3771

- **Design engineering** – special purpose, dedicated metrology systems for demanding applications.
- **Precision manufacturing** – contract machining services for high precision applications and industries.

Centre of Excellence department

Email: taylor-hobson.cofe@ametek.com

Tel: +44 (0) 116 276 3779

- **Inspection services** – measurement of your production parts by skilled technicians using industry leading instruments in accord with ISO standards.
- **Metrology training** – practical, hands-on training courses for roundness and surface finish conducted by experienced metrologists.
- **Operator training** – on-site instruction will lead to greater proficiency and higher productivity.
- **UKAS calibration and testing** – certification for artifacts or instruments in our laboratory or at customer's site.

Service department

Email: taylor-hobson.service@ametek.com

Tel: +44 (0) 116 246 2900

- **Preventative maintenance** – protect your metrology investment with an AMECare support agreement.



© Taylor Hobson Ltd. 2018



Taylor Hobson UK

(Global Headquarters)

PO Box 36, 2 New Star Road
Leicester, LE4 9JQ, England

Tel: +44 (0)116 276 3771

taylor-hobson.sales@ametek.com



Taylor Hobson France

Rond Point de l'Epine Champs
Batiment D, 78990 Elancourt, France

Tel: +33 130 68 89 30

taylor-hobson.france@ametek.com



Taylor Hobson Germany

Rudolf-Diesel-Straße 16,
D-64331 Weiterstadt, Germany

Tel: +49 6150 543 0

taylor-hobson.germany@ametek.com



Taylor Hobson Italy

Via De Barzi, 20087 Robecco sul Naviglio,
Milan, Italy

Tel: +39 02 946 93401

taylor-hobson.italy@ametek.com



Taylor Hobson India

Divyasree NR Enclave, 4th Floor, Block A,
Plot No. 1, EPIP Industrial Area, Whitefield,
Bengaluru - 560066, India

Tel: +91 80 6782 3346

taylor-hobson.india@ametek.com



Taylor Hobson China

taylor-hobson-china.sales@ametek.com

Shanghai Office

Part A1, A4, 2nd Floor, Building No. 1, No. 526
Fute 3rd Road East, Pilot Free Trade Zone,
Shanghai, 200131, China

Tel: +86 21 5868 5111-110

Beijing Office

Western Section, 2nd Floor, Jing Dong Fang
Building (B10), No. 10, Jiu Xian Qiao Road,
Chaoyang District, Beijing, 100015, China

Tel: +86 10 8526 2111

Chengdu Office

Unit 9-10, 10th Floor 9/F, Hi-tech Incubation
Park, No.26 West Jinyue Road, Chengdu,
610041, China

Tel: +86 28 8675 8111

Guangzhou Office

Room 810 Dongbao Plaza, No.767 East
Dongfeng Road, Guangzhou, 510600, China

Tel: +86 20 8363 4768



Taylor Hobson Japan

3F Shiba NBF Tower, 1-1-30, Shiba Daimon
Minato-ku, Tokyo 105-0012, Japan

Tel: +81 34400 2400

taylor-hobson.japan@ametek.com



Taylor Hobson Korea

#309, 3rd FL, Gyeonggi R&DB Center, 105,
Gwanggyo-ro, Yeongtong-gu, Suwon-si,
Gyeonggi-do, Korea, 16229

Tel: +82 31 888 5255

taylor-hobson.korea@ametek.com



Taylor Hobson Singapore

AMETEK singapore, 10 Ang Mo Kio Street 65,
No. 05-12 Techpoint, Singapore 569059

Tel: +65 6484 2388 Ext 120

taylor-hobson.singapore@ametek.com



Taylor Hobson Thailand

89/45, Moo 15, Enterprise Park, Bangna-Trad
Road, Tambol Bangkaew, Amphur Bangplee,
Samutprakarn Province 10540, Thailand

Tel: +66 2 0127500 Ext 505

taylor-hobson.thailand@ametek.com



Taylor Hobson Taiwan

10F-5, No.120, Sec. 2, Gongdao Wu Rd.,
Hsinchu City 30072, Taiwan

Tel: +886 3 575 0099 Ext 301

taylor-hobson.taiwan@ametek.com



Taylor Hobson Mexico

Acceso III No. 16 Nave 3 Parque Ind. Benito
Juarez Queretaro, Qro. Mexico C.P. 76120

Tel: +52 442 426 4480

taylor-hobson.mexico@ametek.com



Taylor Hobson USA

27755 Diehl Road, Suite 300, Warrenville,
IL 60555, USA

Tel: +1 630 621 3099

taylor-hobson.usa@ametek.com



1100 Cassatt Road, Berwyn, PA 19312, USA

Email: info.corp@ametek.com

Web: www.ametek.com